

FIG. 4

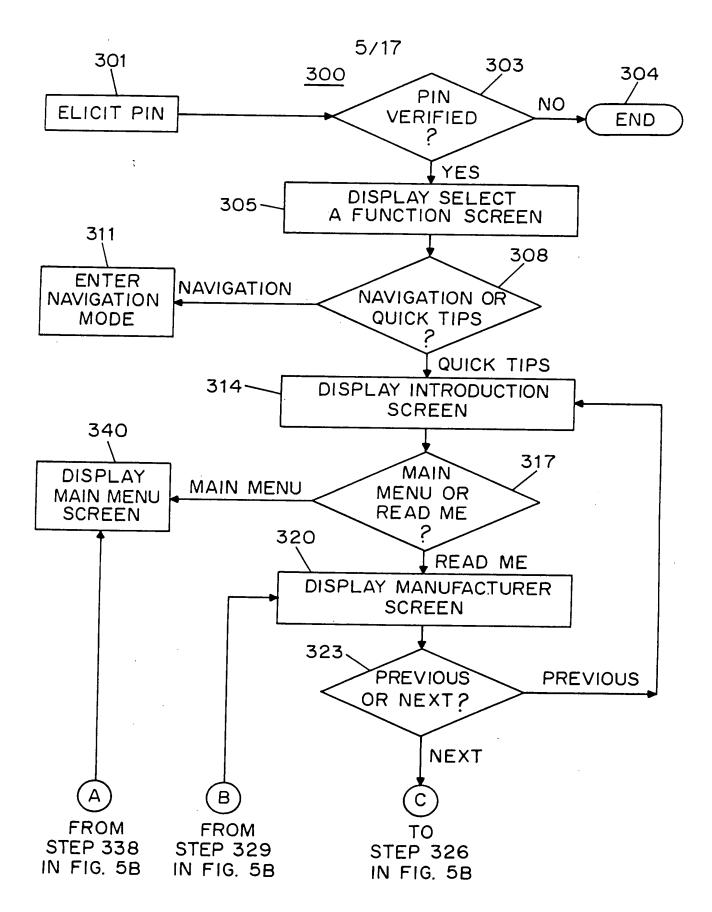


FIG. 5A

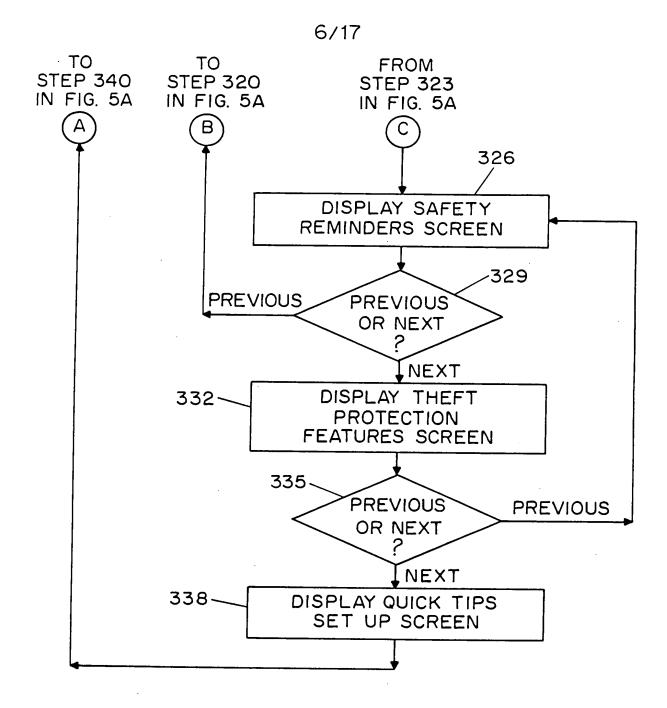


FIG. 5B

7/17

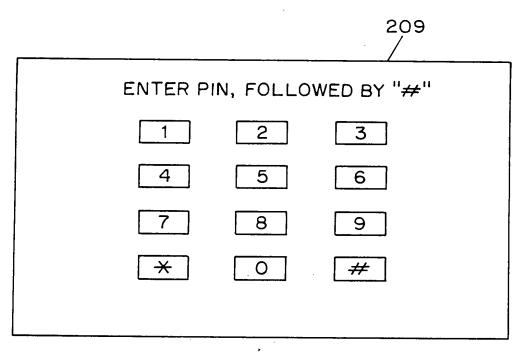


FIG. 6

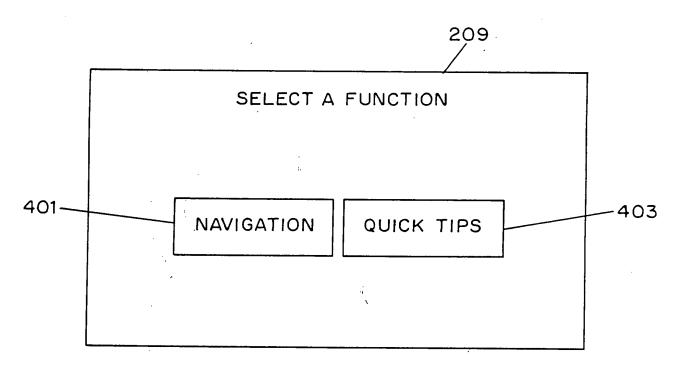


FIG. 7

Calcar, Inc

AUTO

DIRECTOR

WARNING: DO NOT USE WHILE DRIVING
Before using Quick Tips for the first time you must
first read the information provided by the "READ
ME" button.

© 1996 Calcar, Quick Tips ** is a
trademark of Calcar, made in USA

MAIN MENU

READ ME

501

FIG. 8

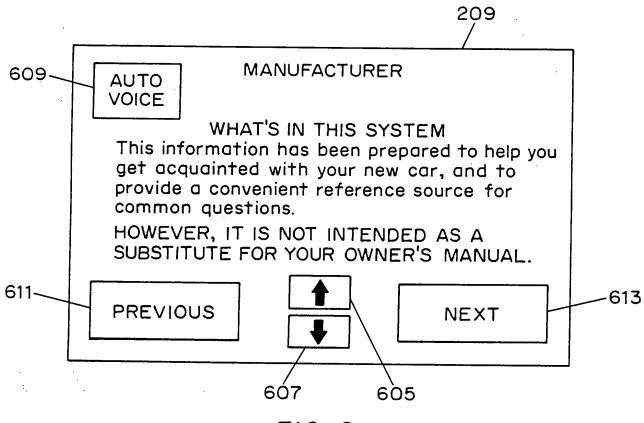
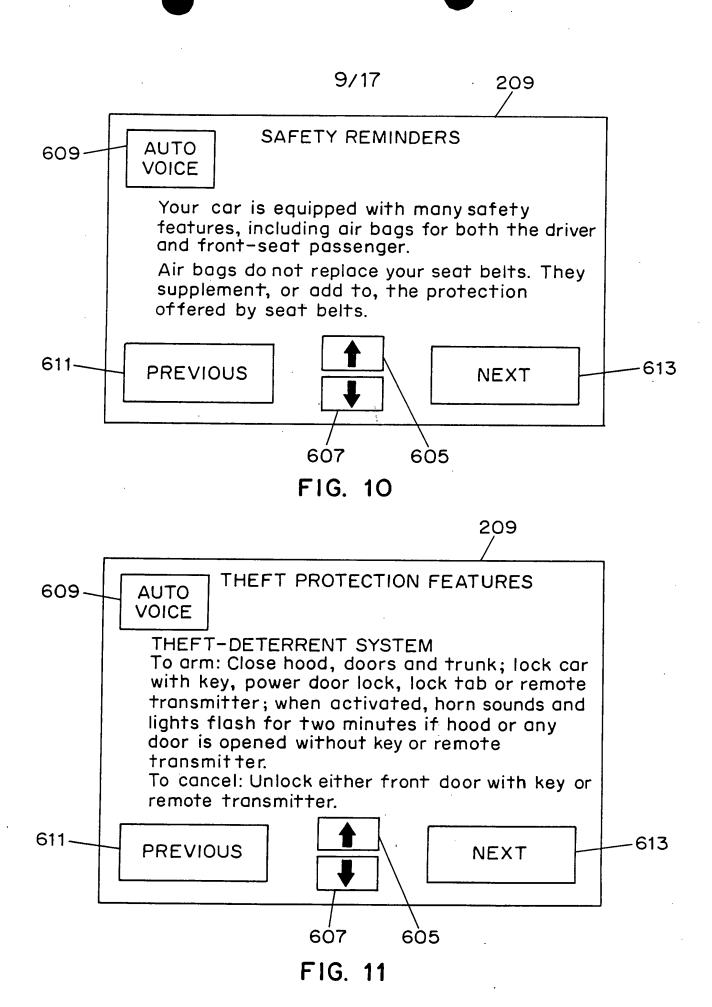
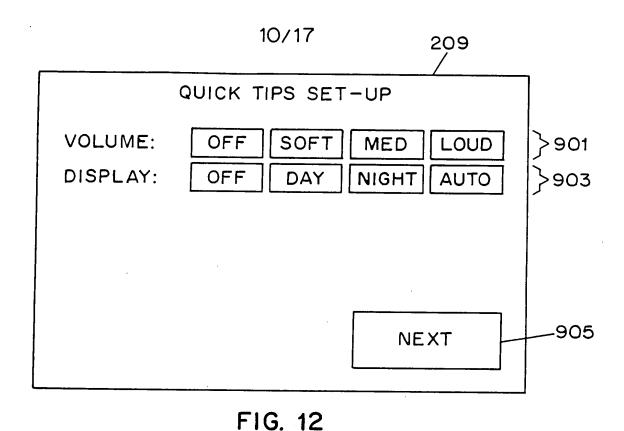
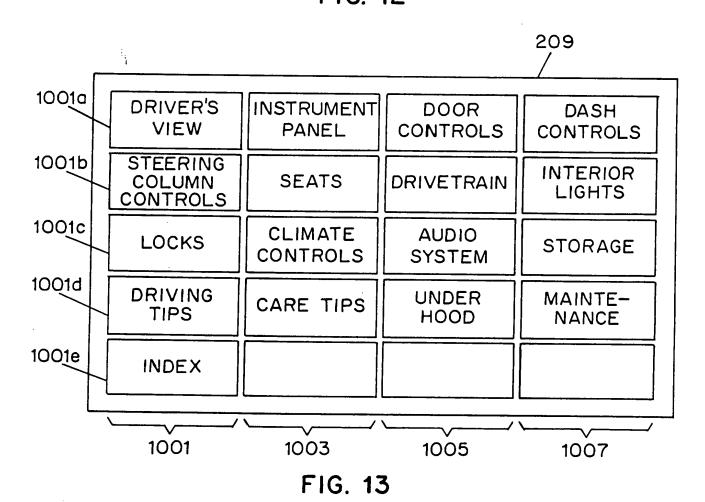


FIG. 9









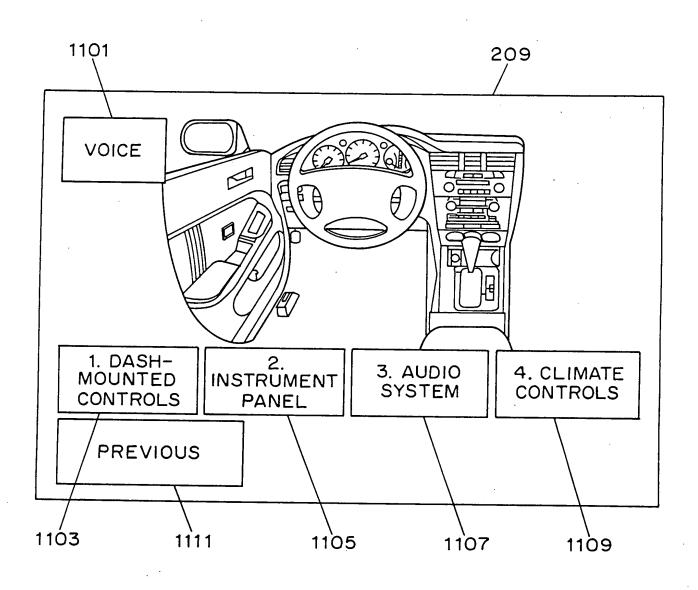


FIG. 14

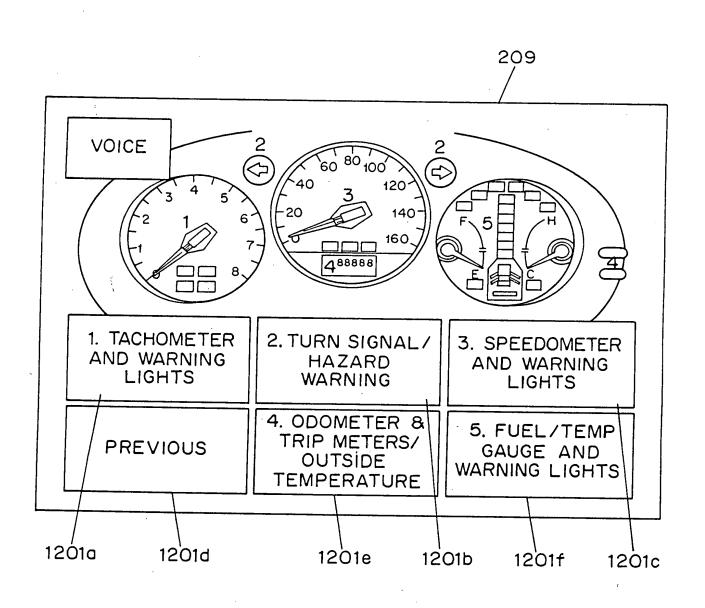


FIG. 15A

13/17

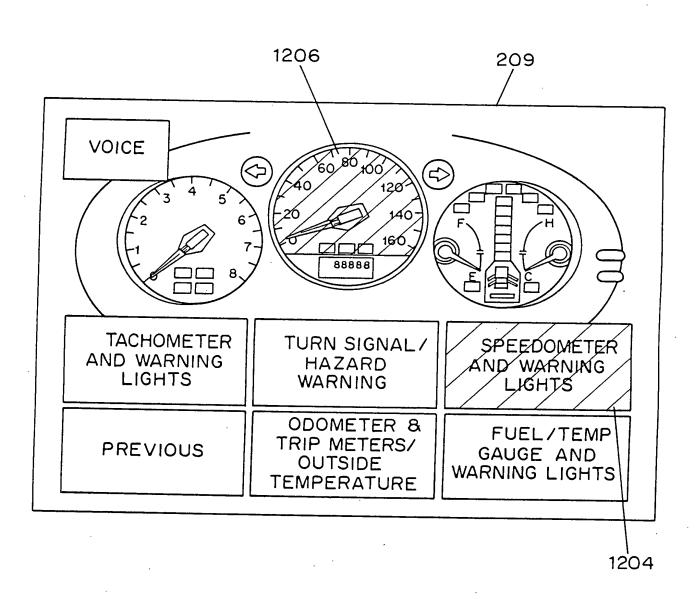
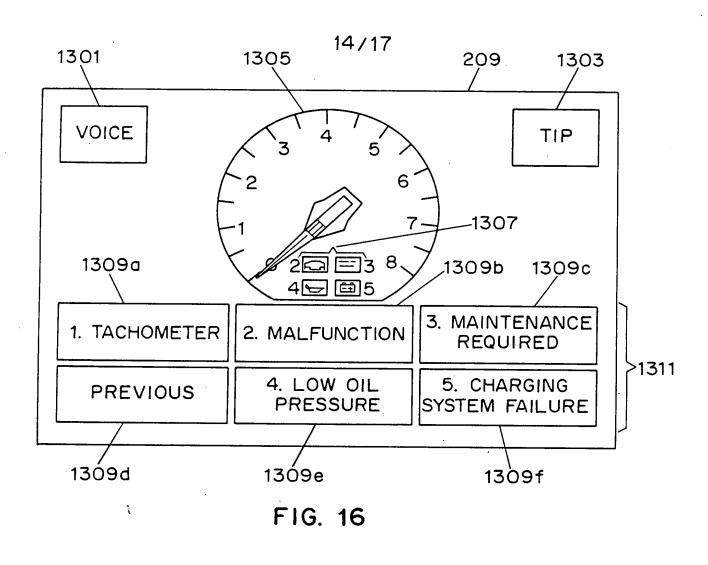
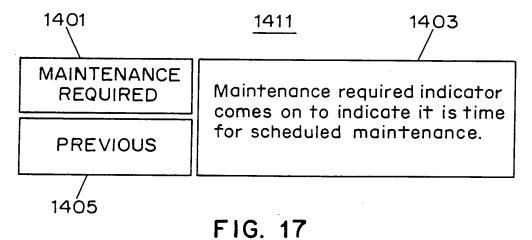
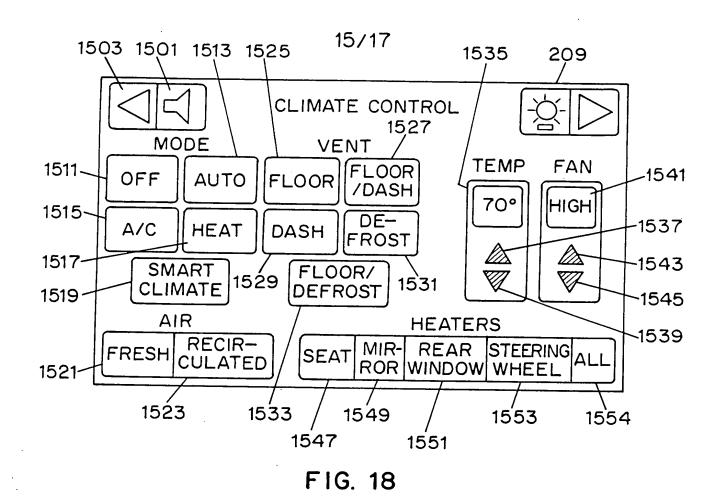


FIG. 15B








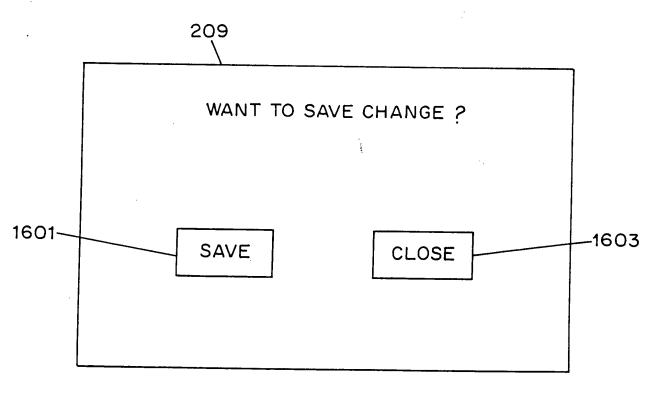


FIG. 19

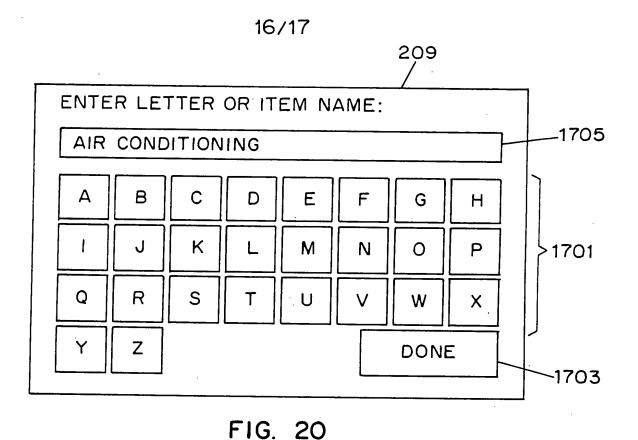

INDEX

AIR CONDITIONING
ANTI-LOCK BRAKE SYSTEM INDICATOR
AUTOMATIC CLIMATE CONTROL
AUTOMATIC TRANSMISSION
SHIFT LEVER POSITION INDICATOR

1805

PREVIOUS

1803

FIG. 21

	17/17										
1903	LINK TO CLIMATE CONTROL SCREEN OF FIG. 18 LINK TO WARNING LIGHT OPTION #4 ON FUEL/TEMP SCREEN (NOT SHOWN)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 18		LINK TO CHARGING SYSTEM FAILURE OPTION 1309f (FIG. 16)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 18	LINK TO CLIMATE CONTROL SCREEN OF FIG. 18	LINK TO WARNING LIGHT OPTION #2 ON SPEEDOMETER SCREEN (NOT SHOWN)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 18	LINK TO WARNING LIGHT OPTION #7 ON FUEL/TEMP SCREEN (NOT SHOWN)	LINK TO TURN SIGNAL/HAZARD WARNING OPTION 1201b (FIG. 15A)	
1901	1 1 1	CONTROL	•••	CHARGING SYSTEM FAILURE INDICATOR	CLIMATE CONTROL SYSTEM	COOLING	CRUISE CONTROL INDICATOR	DEFOG/DEFROST	DOOR AJAR INDICATOR	DIRECTIONAL SIGNALS INDICATOR	• • •
	1905										-••

F16. 22